

HAND SANITIZER MACHINE

User's Manual and Technical Data Sheet



Contents

Preface.....	1
1. General Safety Instruction	1
2. Dimension of Hand Disinfections Machine.....	2
3. Specification	3
4. Contents of the machine pack	3
5. Installation & Operation	3
6. Troubleshooting	4

Preface


This user's manual provides general information on operation and maintenance of our Hand Cleaning Dispenser. Any improper use will shorten its longevity. Read this manual completely and carefully before operation of the machine. The manual should be kept in a convenient place for future reference.

For any questions, please contact to our service team or manufacturer at info@albahiya-me.com

1. General Safety Instructions

1. Please read the manual carefully, check if there are any missed parts before installation and operation.
2. Keep this machine on the solid ground,
3. Do not operate any appliance with a damaged cord or plug.
4. Do not lengthen the power line.
5. Do provide separate power supply socket for this machine. The loading capacity of the socket shall be in line with the requirements listed in the User Manual.
6. Do keep the children away from the machine. Do not operate the machine except for the authorized staff.
7. Disconnect the power supply plug if the machine would not be used for a long time.
8. Do not install horizontally.
9. Do not touch electronic box without technical staff.
10. Keep clean drain pan and do not apply any maintenance while unit is energized.
11. In case of any abnormal situations please report factory immediately.
12. Do not hung any other object to machine rather than manufacturer accessories.
13. In case of any shifting or relocation of units, Please pack unit properly and lift or offload gently.

2. Dimension of Hand Disinfections Machine

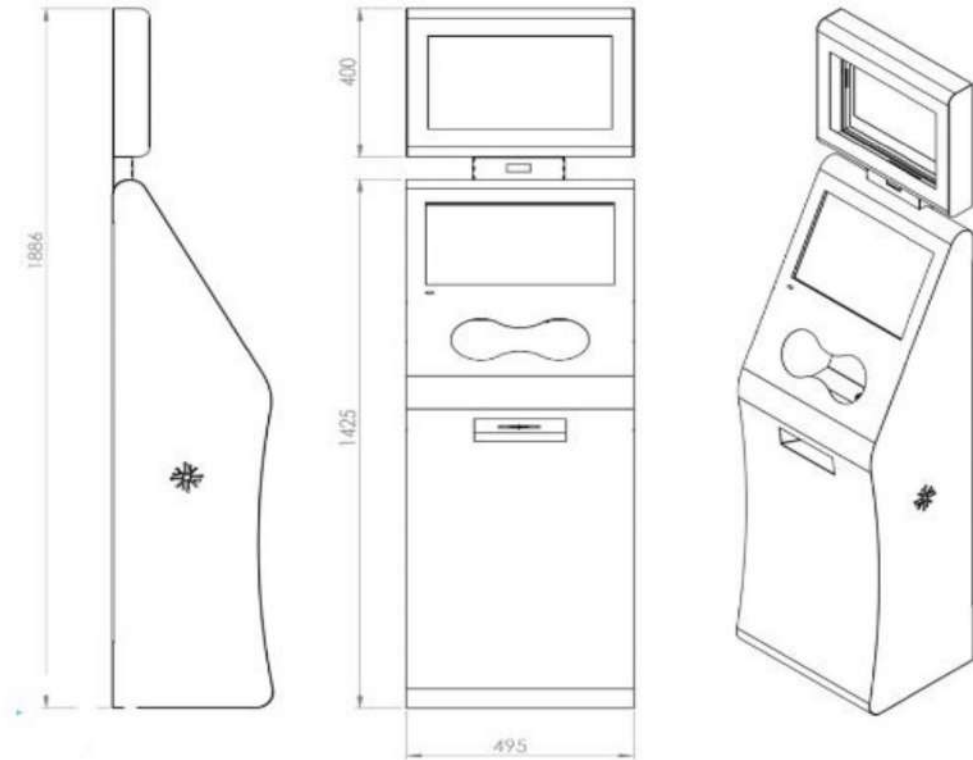

Model	SVHM-001
Power Supply (Single Phase)	220 V / 50 Hz / 101 W / 1A
Dimension (mm)	495 x 350 x 1825
Packing Dimension (mm)	1460 x 440 x 630
Brut Weight	60 KG
Net Weight	35 KG
HS Code	851633000000
Manufacturer Locations	Made In Turkey
Certificates	CE –TRA-20-2103-01

3. Specifications

- ✓ Aluminum body casing of 2mm sheet thickness (1050 H14) with bottom flanged black sheet metal of 10 mm thickness.
- ✓ Electrostatic paint- 150Micron Paint
- ✓ Hinged locked covers for disinfection, digital display and illuminated area sections.
- ✓ Electrostatic powder coating (150-micron coat thickness, at 200 degrees).
- ✓ Voice Recording and Playback Module.
- ✓ Vibration pump, 220V 50Hz 54W 1/1 min.
- ✓ Digital display screen.
- ✓ HD media player.
- ✓ Voice Recorder Module.
- ✓ Electronic hand sensor.
- ✓ 12V 0.5W speaker.
- ✓ User Counter
- ✓ Phone, wallet and key UV disinfection module
- ✓ Liquid Drain pan

4. Contents of the machine pack

1. Main body.
2. Advertising area case
3. Power cable.
4. Remote control

5. Installation & Operation

1. Unpack the machine.
2. Check that all items are available as indicated in list above.
3. Fix the illuminated advertising area on the machine main body.
4. Place the sanitizer can in place and connect it to feeder hose.
5. Place the drainage can in place and connect to drainage hose.
6. Plug the machine into the power source.
7. Switch the power ON.
8. Remote Control can change video and adjust sound level.
9. To change video USB has to be removed and new video can be installed easily.
10. To change public announcement during the activation of sensor, SD card has to be removed and any lounge voice record can be installed easily.

6. Troubleshooting

Symptom	Cause	Action
The machine is not working	No power	Check if plug and wire are fine; Check if socket has power.
No flow from the dispensing nozzle	Low liquid level or empty can	Top off dispensing can
	Blocked feeder hose	Clean the feeder hose

- ✓ A Healthy Life is In your Hands
- ✓ Healthier future with cleaner Hands
- ✓ Please clean your Hands

